

DMX Channel Values

26-CH Mode

CHANNEL	VALUE	FUNCTION	CHANNEL	VALUE	FUNCTION
1	000 ⇔ 255	Master Dimmer 0%~100%	14	000 ⇔ 255	Red (section 5) Dimmer: 0%~100%
2	000 ⇔ 255	Red (section 1) Dimmer: 0%~100%	15	000 ⇔ 255	Green (section 5) Dimmer: 0%~100%
3	000 ⇔ 255	Green (section 1) Dimmer: 0%~100%	16	000 ⇔ 255	Blue (section 5) Dimmer: 0%~100%
4	000 ⇔ 255	Blue (section 1) Dimmer: 0%~100%	17	000 ⇔ 255	Red (section 6) Dimmer: 0%~100%
5	000 ⇔ 255	Red (section 2) Dimmer: 0%~100%	18	000 ⇔ 255	Green (section 6) Dimmer: 0%~100%
6	000 ⇔ 255	Green (section 2) Dimmer: 0%~100%	19	000 ⇔ 255	Blue (section 6) Dimmer: 0%~100%
7	000 ⇔ 255	Blue (section 2) Dimmer: 0%~100%	20	000 ⇔ 255	Red (section 7) Dimmer: 0%~100%
8	000 ⇔ 255	Red (section 3) Dimmer: 0%~100%	21	000 ⇔ 255	Green (section 7) Dimmer: 0%~100%
9	000 ⇔ 255	Green (section 3) Dimmer: 0%~100%	22	000 ⇔ 255	Blue (section 7) Dimmer: 0%~100%
10	000 ⇔ 255	Blue (section 3) Dimmer: 0%~100%	23	000 ⇔ 255	Red (section 8) Dimmer: 0%~100%
11	000 ⇔ 255	Red (section 4) Dimmer: 0%~100%	24	000 ⇔ 255	Green (section 8) Dimmer: 0%~100%
12	000 ⇔ 255	Green (section 4) Dimmer: 0%~100%	25	000 ⇔ 255	Blue (section 8) Dimmer: 0%~100%
13	000 ⇔ 255	Blue (section 4) Dimmer: 0%~100%	26	000 ⇔ 000 001 ⇔ 255	Strobe No Function Strobe 1~100%

