











DMX Channel Values (13 Channel)

CHANNEL	VALUE	FUNCTION
1	000 → 255	Pan
2	000 → 255	Pan Fine
3	000 → 255	Tilt
4	000 → 255	Tilt Fine
5	000 → 255	Vector Speed: (Normal → Slow) Dimmer/Strobe
6	000 → 007	Closed
	008 → 134	100-0%
	135 → 239	Strobe (slow → fast)
	240 → 255	Open
		Red
7	000 → 255	0-100% Green
8	000 → 255	0-100% Blue
9	000 → 255	0-100% Color Macros
10	000 → 007	No Function
	008 → 021	White
	022 → 034	Red
	035 → 049	Green
	050 → 063	Blue
	064 → 077	Cyan
	078 → 091	Magenta
	092 → 105	Yellow
	106 → 119	Purple
	120 → 133	Orange
	134 → 147	Chartreuse
	148 → 161	Pink
	162 → 175	Brown
	176 → 189	Gold
	190 → 203	Crimson
204 → 217	Violet	
218 → 231	Crape	
232 → 255	Color-Change Macro 1	
11	000 → 255	Vector Speed (Color) Movement Macros
12	000 → 007	No Function
	008 → 022	Auto Program 1
	023 → 037	Auto Program 2
	038 → 052	Auto Program 3
	053 → 067	Auto Program 4
	068 → 082	Auto Program 5
	083 → 097	Auto Program 6
	098 → 112	Auto Program 7
	113 → 127	Auto Program 8
	128 → 142	Sound Active 1
	143 → 157	Sound Active 2
	158 → 172	Sound Active 3
	173 → 187	Sound Active 4
	188 → 202	Sound Active 5
	203 → 217	Sound Active 6
	218 → 232	Sound Active 7
233 → 255	Sound Active 8	
13		Gobo
		 0-7
		 8-15
		 16-23
		 24-31
		 32-39
		 40-47
		 48-55
		 56-63
		 64-71
		 72-79
	80 - 94	GOGO1 Shake
	95 - 109	GOGO2 Shake
	110 - 124	GOGO3 Shake
	125 - 139	GOGO4 Shake
140 - 154	GOGO5 Shake	
155 - 169	GOGO6 Shake	
170 - 184	GOGO7 Shake	
185 - 199	GOGO8 Shake	
200 - 214	GOGO9 Shake	
215 - 235	Positive rainbow effect with increasing speed	
236 - 255	Negative rainbow effect with increasing speed	