

18CH mode		
Channel	Function	Effect
CH 1	Pan	0-255: 0 – 540°
CH 2	Tilt	0-255: 0 – 360°
CH 3	Tilt unlimited rotation	0-55: No function 56-155: Unlimited rotation forward, slow-fast 156-255: Unlimited rotation backward, slow-fast
CH 4	Tilt fine	0-255: Fine adjustment
CH 5	Pan / tilt speed	0-255: Slow-fast
CH 6	Dimmer	0-255: Brightness 0 - 100%
CH 7	Strobe	0-55: No function 56-155: Strobe 1-25Hz 156-205: Random strobe 206-255: Thunder effect
CH 8	Red	0-255: Brightness 0 - 100%
CH 9	Green	0-255: Brightness 0 - 100%
CH 10	Blue	0-255: Brightness 0 - 100%
CH 11	White	0-255: Brightness 0 - 100%
CH 12	Static effects show (CH 17: 50-99)	0-24: Effect 1 25-49: Effect 2 50-74: Effect 3 75-99: Effect 4 100-124: Effect 5 125-149: Effect 6 150-174: Effect 7 175-199: Effect 8 200-224: Effect 9 225-249: Effect 10 250-255: Effect show, speed controlled by CH 16
CH 13	Dynamic effects show (CH 17: 100-149)	0-49: Effect 1, speed controlled by CH 16 50-99: Effect 2, speed controlled by CH 16 100-149: Effect 3, speed controlled by CH 16 150-255: Effect 4, speed controlled by CH 16
CH 14	Light effect speed	0-255: Fast-slow
CH 15	Macro function	0-49: No function 50-99: Activate static effects on CH 14 100-149: Activate dynamic effects on CH 15 150-199: Auto 200-255: Sound activated mode
CH 16	Reset	0-250: No function 251-255: Reset (after 3 sec.)