


Mini LED spider light

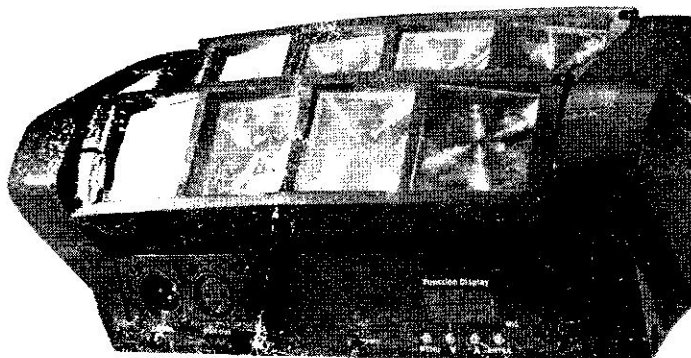

User manual

Please read the instructions carefully before use

LEP

OFF

ON

Back light on/off

DISP

DISP

DISP

Screen reverse display

PLN

NO

YES

X motor forward/reverse

PLN

NO

YES

Y motor forward/reverse

EPSE

Auto test

F5PE

Reset

DMX Channel:

10CH	14 CH		Value
1	1	Motor 1	0-255
2	2	Motor 2	0-255

3	3	Motor speed	0-255 from fast to slow
4	4	Dimming	0-255
5	5	strobe	000-007 off 008-015 on 016-131 strobe from slow to fast 132-139 on 140-181 quickly on slowly off 182-189 on 190-231 slowly on quickly off 232-239 on 240-247 strobe in random 248-255 on
6	6	Led lamp 1	0-255
7	7	Led lamp 2	0-255
8	8	Led lamp 3	0-255
9	9	Led lamp 4	0-255
6	10	Led lamp 5	0-255
7	11	Led lamp 6	0-255
8	12	Led lamp 7	0-255
9	13	Led lamp 8	0-255
10	14		000-007 open then other channels available 008-063 auto run 064-127 Sound control 128-255 Reset

4. Trouble shooting

Following are a few common problems that may occur during operation. Here are some suggestions for easy troubleshooting:

A. The unit does not work, no light and the fan does not work

1. Check the connection of power and main fuse.
2. Measure the mains voltage on the main connector.
3. Check the power on LED.