 


LED PROFESSIONAL STAGE LIGHT EQUIPMENT

Mini Spider Light

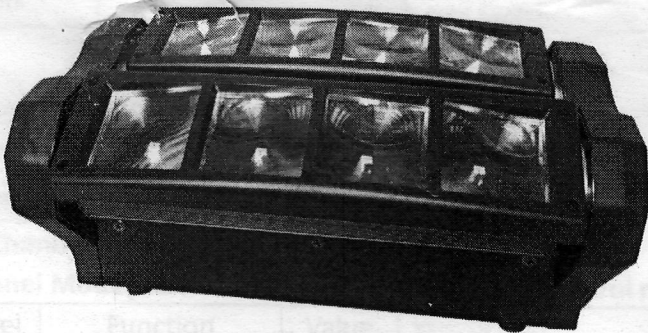

Please read the instructions before using

Menu:

| | | |
|-------|------------|---|
| ADDR | A001-A512 | Address Setting |
| CHND | 7CH | 7 Channel option |
| | 15CH | 15 Channel option |
| SLND | MAST | Auto Mode (selfpropelled) |
| | SOUN | Sound mode |
| | SLAV | Master and Slave option |
| SHND | Sh1---Sh24 | Effect selected. Sh24 for multi-effect self-propelled; SPED 01-08 Chase speed from slow to fast |
| SOUND | ON,OFF | Sound control Switch |
| SOEN | 0-100 | Sound Sensitivity(0 close,100 the most) |
| TEST | YES | Automatically Test |
| DISP | NO | Reverse Display |
| | YES | Reverse Display |
| LED | OFF | Back-light Switch |
| | NO | Back-light Switch |
| 1TIL | NO | Y1 Motor reverse |
| | YES | Y1 Motor reverse |
| 2TIL | NO | Y2 Motor reverse |
| | YES | Y2 Motor reverse |
| DEFT | YES,NO | Reset |

DMX Channel Function**7 Channel Mode(NOTE: Enter Addr-A001 to DMX control mode)**

| Channel | Function | Value | Instruction |
|---------|--------------|--------|--------------------------------|
| 1 | Motor1 route | 0-255 | 0° ---135° |
| 2 | Motor2 route | 0-255 | 0° ---135° |
| 3 | Sum Dimmer | 0-255 | 0---100% |
| 4 | Strobe | 0-9 | No Strobe |
| | | 10-255 | Strobe speed from slow to fast |
| | | 0-7 | No Effect |
| | | 8-17 | Effect 1 |
| | | 18-27 | Effect 2 |
| | | 28-37 | Effect 3 |
| | | 38-47 | Effect 4 |


| | | | | | |
|---|--------|---------|--|---------|------------------------|
| 5 | Effect | 48-57 | Effect 5 | | |
| | | 58-67 | Effect 6 | | |
| | | 68-77 | Effect 7 | | |
| | | 78-87 | Effect 8 | | |
| | | 88-97 | Effect 9 | | |
| | | 98-107 | Effect 10 | | |
| | | 108-117 | Effect 11 | | |
| | | 118-127 | Effect 12 | | |
| | | 128-136 | Effect 13 | | |
| | | 137-146 | Effect 14 | | |
| | | 147-156 | Effect 15 | | |
| | | 157-166 | Effect 16 | | |
| | | 167-176 | Effect 17 | | |
| | | 177-186 | Effect 18 | | |
| | | 187-196 | Effect 19 | | |
| | | 197-206 | Effect 20 | | |
| | | 207-216 | Effect 21 | | |
| | | 217-226 | Effect 22 | | |
| | | 227-236 | Effect 23 | | |
| | | 237-246 | Effect 24 Self-propelled multi-effects | | |
| | | 247-255 | Effect 25 Sound | | |
| | | 6 | Effect speed | 0-255 | From fast to slow |
| | | 7 | Reset | 241-250 | For 5 seconds to reset |

15 Channel Mode(NOTE: Enter Addr-A001 to DMX control mode)


| Channel | Function | Value | Instruction |
|---------|--------------|--------|---------------------------|
| 1 | Motor1 route | 0-255 | 60° ---150° |
| 2 | Motor2 route | 0-255 | 60° ---150° |
| 3 | Sum Dimmer | 0-255 | 0---100% |
| 4 | Strobe | 0-9 | No Strobe |
| | | 10-255 | Strobe speed from slow to |
| 5 | LED1 Dimming | 0-255 | 0---100% |
| 6 | LED2 Dimming | 0-255 | 0---100% |
| 7 | LED3 Dimming | 0-255 | 0---100% |

| | | | |
|---------|-----------------|---------|--|
| 8 | LED4 Dimming | 0-255 | 0---100% |
| 9 | LED5 Dimming | 0-255 | 0---100% |
| 10 | LED6 Dimming | 0-255 | 0---100% |
| 11 | LED7 Dimming | 0-255 | 0---100% |
| 12 | LED8 Dimming | 0-255 | 0---100% |
| 13 | Marco Function | 0-7 | No Effect |
| | | 8-17 | Effect 1 |
| | | 18-27 | Effect 2 |
| | | 28-37 | Effect 3 |
| | | 38-47 | Effect 4 |
| | | 48-57 | Effect 5 |
| | | 58-67 | Effect 6 |
| | | 68-77 | Effect 7 |
| | | 78-87 | Effect 8 |
| | | 88-97 | Effect 9 |
| | | 98-107 | Effect 10 |
| | | 108-117 | Effect 11 |
| | | 118-127 | Effect 12 |
| | | 128-136 | Effect 13 |
| | | 137-146 | Effect 14 |
| | | 147-156 | Effect 15 |
| | | 157-166 | Effect 16 |
| | | 167-176 | Effect 17 |
| | | 177-186 | Effect 18 |
| | | 187-196 | Effect 19 |
| | | 197-206 | Effect 20 |
| | | 207-216 | Effect 21 |
| | | 217-226 | Effect 22 |
| | | 227-236 | Effect 23 |
| | | 237-246 | Effect 24 Self-propelled multi-effects |
| 247-255 | Effect 25 Sound | | |
| 14 | Effect speed | 0-255 | From slow to fast |
| 15 | Reset | 241-250 | For 5 seconds to reset |

 User's Manual

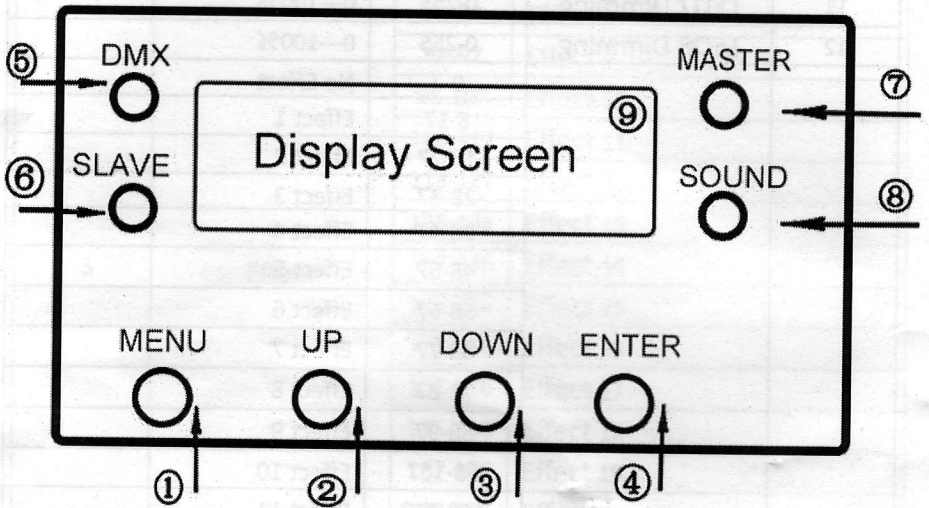

 - 1.MENU
- 2.UP
- 3.DOWN
- 4.ENTER
- 5.DMX Pilot Lamp
- 6.Slave Pilot Lamp
- 7.Master Pilot Lamp
- 8.Sound Pilot Lamp
- 9.Display Screen

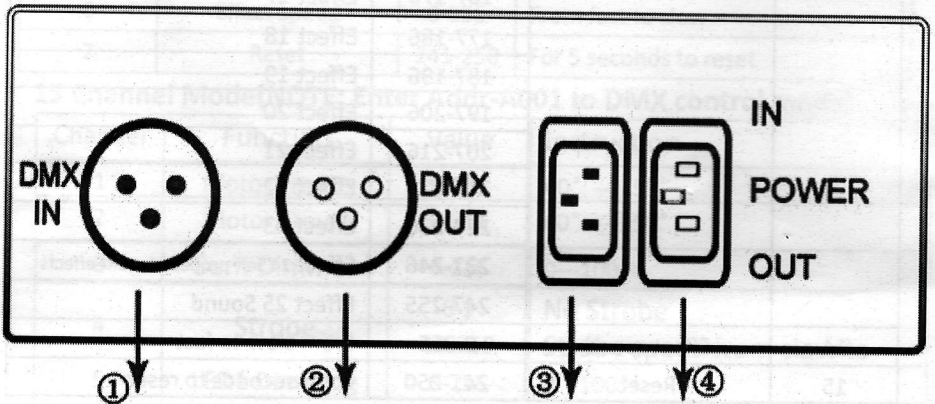

- 1.DMX IN
- 2.DMX OUT
- 3.POWER IN
- 4.Connect output

"rSt" is displayed after the power is plugged in. The moving head light is being reset. Please do not operate.

The step to start the Self-Propelled mode:

1. Press "MENU" to find "SLnd",
2. Press "ENTER" to enter the menu,
3. Press "UP" or "DOWN" to select "NASt", and press "ENTER".

The step to start the Sound Active Control mode:

1. Press "MENU" to find "SoUd",
2. Press "ENTER" to enter the menu,
3. Press "UP" or "DOWN" to select "ON", and press "ENTER".
4. Continue to press "MENU" to find "SLnd", press "ENTER",
5. Press "UP" or "DOWN" to select "SoUn", and press "ENTER".