




SX-MH200A

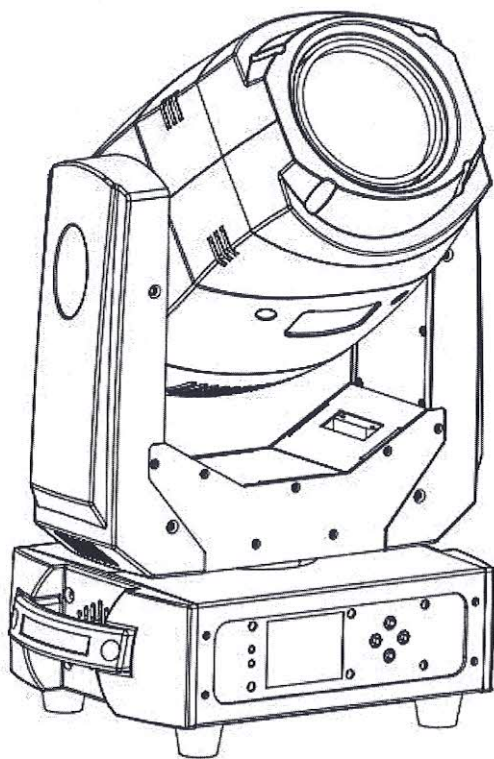

User Manual

SX-MH200A 200W LED Beam Spot Moving Head

Channel	DMX Value	Function
1	000 - 255	X
2	000 - 255	Y
3	000-255	Dimmer(0-100%)
4	000-004	Shutter closed
	005-250	Strobe effect slow to fast
	251-255	Shutter open
5	000-007	Empty
	008-047	Auto Play 1
	048-087	Auto Play 2
	088-127	Auto Play 3
	128-167	Auto Play 4
	168-207	Auto Play 5
	208-247	Auto Play 6
6	248-255	Color Gobo Sound Control
	000-007	Empty
	008-032	X/Y auto run 1
	033-058	X/Y auto run 2
	059-084	X/Y auto run 3
	085-110	X/Y auto run 4
	111-136	X/Y auto run 5
	137-162	X/Y auto run 6
	163-188	X/Y auto run 7
	189-214	X/Y auto run 8
	215-240	X/Y auto run 9
	241-255	X/Y Sound Control

6.2 18channel definition table

Channel	DMX Value	Function
1	000 - 255	X
2	000-255	X-Fine
3	000 - 255	Y
4	000-255	Y-Fine
5	000 - 255	XY SPEED

SX-MH200A 200W LED Beam Spot Moving Head

SX-MH200A 200W LED Beam Spot Moving Head

6	000-255	<i>Dimmer(0-100%)</i>
7	000-004	<i>Shutter closed</i>
	005-250	<i>Strobe effect slow to fast</i>
	251-255	<i>Shutter open</i>
8	000-004	<i>Open(White)</i>
	005-013	<i>White/Color1</i>
	014-022	<i>Color1</i>
	023-031	<i>Color1/Color2</i>
	032-040	<i>Color2</i>
	041-049	<i>Color2/Color3</i>
	050-058	<i>Color3</i>
	059-067	<i>Color3/Color4</i>
	068-076	<i>Color4</i>
	077-085	<i>Color4/Color5</i>
	086-094	<i>Color5</i>
	095-103	<i>Color5/Color6</i>
	104-112	<i>Color6</i>
	113-121	<i>Color6/Color7</i>
	122-130	<i>Color7</i>
	131-139	<i>Open(White)</i>
	140-195	<i>Forward rainbow effect from fast to slow</i>
	196-199	<i>Rotation stop</i>
	200-255	<i>Backward rainbow effect from slow to fast</i>
9	000-005	<i>Open(White)</i>
	006-014	<i>Gobo1</i>
	015-023	<i>Gobo2</i>
	024-032	<i>Gobo3</i>
	033-041	<i>Gobo4</i>
	042-050	<i>Gobo5</i>
	051-059	<i>Gobo6</i>
	060-068	<i>Gobo7</i>
	069-077	<i>Gobo8</i>
	078-084	<i>Gobo1 Shake</i>
085-091	<i>Gobo2 Shake</i>	

SX-MH200A 200W LED Beam Spot Moving Head

SX-MH200A 200W LED Beam Spot Moving Head

	092-098	Gobo3 Shake
	099-105	Gobo4 Shake
	106-112	Gobo5 Shake
	113-119	Gobo6 Shake
	120-126	Gobo7 Shake
	127-133	Gobo8 Shake
	134-194	Forward rainbow effect from fast to slow
	195-255	Backward rainbow effect from slow to fast
10	000-007	Open(White)
	008-019	Gobo1
	020-031	Gobo2
	032-043	Gobo3
	044-055	Gobo4
	056-067	Gobo5
	068-079	Gobo6
	080-088	Gobo1 Shake
	089-097	Gobo2 Shake
	098-106	Gobo3 Shake
	107-115	Gobo4 Shake
	116-124	Gobo5 Shake
	125-133	Gobo6 Shake
	134-194	Forward rainbow effect from fast to slow
	195-255	Backward rainbow effect from slow to fast
	11	000-009
010-129		Forward Gobo2 Rotation from fast to slow
130-134		Stop
135-255		Backward Gobo2 Rotation from slow to fast
12	000-255	Focus
13	000-015	Open(White)
	016-255	Prism
14	000-005	Stop
	006-129	Forward Prism Rotation from fast to slow
	130-134	Stop
	135-255	Backward Prism Rotation from slow to fast

SX-MH200A 200W LED Beam Spot Moving Head

SX-MH200A 200W LED Beam Spot Moving Head

15	000-127	<i>Open</i>
	128-255	<i>Zoom</i>
16	000-007	<i>Empty</i>
	008-047	<i>Auto Play 1</i>
	048-087	<i>Auto Play 2</i>
	088-127	<i>Auto Play 3</i>
	128-167	<i>Auto Play 4</i>
	168-207	<i>Auto Play 5</i>
	208-247	<i>Auto Play 6</i>
	248-255	<i>Color Gobo Sound Control</i>
17	000-007	<i>Empty</i>
	008-032	<i>X/Y auto run 1</i>
	033-058	<i>X/Y auto run 2</i>
	059-084	<i>X/Y auto run 3</i>
	085-110	<i>X/Y auto run 4</i>
	111-136	<i>X/Y auto run 5</i>
	137-162	<i>X/Y auto run 6</i>
	163-188	<i>X/Y auto run 7</i>
	189-214	<i>X/Y auto run 8</i>
	215-240	<i>X/Y auto run 9</i>
	241-255	<i>X/Y Sound Control</i>
18	250-255	<i>RESET(10S)</i>

SX-MH200A 200W LED Beam Spot Moving Head