

DMX Channel Values for 14-channel

CHANNEL	VALUE	FUNCTION
1	000-255	Pan
	000-255	Tilt
	000-255	Pan Fine
	000-255	Tilt Fine
	000-255	XY Speed(Fast ~Slow) Color
6	000-015	Open Position
	016-031	color 1
	032-047	color 2
	048-063	color 3
	064-079	color 4
	080-095	color 5
	096-111	color 6
	112-127	color 7
	128-191	Rainbow effect clockwise slow to fast
	192-255	Rainbow effect anti clockwise slow to fast Gobo Wheel Static
	000-006	Open Position
	007-013	Gobo 1
	014-020	Gobo 2
021-027	Gobo 3	
028-034	Gobo 4	
035-041	Gobo 5	
042-048	Gobo 6	
049-055	Gobo 7	
056-062	Gobo 8	
063-069	Gobo 8 Shake	
070-076	Gobo 7 Shake	
077-083	Gobo 6 Shake	
084-090	Gobo 5 Shake	
091-097	Gobo 4 Shake	
098-104	Gobo 3 Shake	
105-111	Gobo 2 Shake	
112-118	Gobo 1 Shake	
119-127	open Position	
128-191	rainbow effect clockwise slow to fast	
192-255	rainbow effect anti clockwise slow to fast Gobo Wheel Rotation	
8	000-018	Open Position
	019-037	Gobo 1
	038-056	Gobo 2
	057-075	Gobo 3
	076-094	Gobo 4
	095-113	Gobo 5
	114-127	Gobo 6
	128-191	Rainbow effect clockwise slow to fast
	192-255	Rainbow effect anti clockwise slow to fast Gobo Rotation
	000-009	Rotation stop
	010-115	Gobo rotation anti clockwise slow to fast
	116-119	Rotation stop
	120-225	Gobo rotation clockwise slow to fast
226-255	Gobo Bounce	
10	000-015	Neutral
	016-200	Strobe from slow to fast
	201-250	Random strobe from slow to fast
	251-255	LED on
	000-255	Dimmer(0-100%)
12	000-044	Function
	045-064	Neutral
	065-094	Black out during Pan/Tilt movement
	095-134	Reset after 3 sec
	135-174	Auto program slow speed
	175-214	Auto program middle speed
	215-255	Auto program fast speed auto program sound
	000-015	Prism
	016-050	Open
	051-255	Prism in (No rotation) Prism rotation slow to fast Focus
14	000-255	Focus from near to far

# 90W LED Spot Moving Head

## User Manual

