

DMX Cahnnel Values  
Advanced Mode (12 channel)

DMX CHS	CH value	Function
1CH X rotation	000-255	x rotation 0 – 540
2CH X fine adjustment	000-255	x find adjustment
3CH Y rotation	000-255	Y rotation 0 – 240
4CH find adjustment	000-255	Y find adjustment
5CH X/Y Speed	000-255	XY speed from fast to slow
6CH LED 60W Dimmer	000-255	From dark to bright
7CH	0-5	on
	6 – 249	strobe from slow to fast
	250 – 255	on
8CH Focus	000 – 255	Focus, from near to far
9CH 7Colo + Whit	0 – 9	White
	10 – 29	Red
	30 – 49	Green
	50 – 69	Blue
	70 – 89	Yellow
	90 – 109	Purpel
	110 – 129	Aqua
	130 – 149	Cambridge blue
150 – 255	Rainbow Effect (slow to fast)	
10CH	0 – 19	White
	20 – 39	Gobo 1
	40 – 59	Gobo 2
	60 – 79	Gobo 3
	80 – 99	Gobo 4
	100 – 119	Gobo 5
	120 – 139	Gobo 6
	140 – 255	Gobo rotating CW and CCW from slow to fast
11CH	0 – 19	No function
	20 – 139	Gobo self-rotating clockwise from slow to fast
	140 – 255	Gobo self-rotating counter-clockwise from slow to fast
12CH Reset	1 – 199	No function
	200 – 239	Reset after 3 second
	240 – 255	No function