

10CH Mode

	VALUE	DESCRIPTION
CH1	0	No action
	1-255	RGBWA+UV Dimmer
CH2	0	No action
	1-255	Red dimmer
CH3	0	No action
	1-255	Green dimmer
CH4	0	No action
	1-255	Blue dimmer
CH5	0	No action
	1-255	White dimmer
CH6	0	No action
	1-255	Amber dimmer
CH7	0	No action
	1-255	UV dimmer
CH8	0	No action
	1-255	Strobe from slow to fast
	0-8	No action
	9-50	Static Mixing Mode (32)

CH9	51-100	jump mode
	101-150	Mutation mode
	151-200	fade mode
	201-220	Sound active mode 1
	221-240	Sound active mode 2
	241-255	Sound active mode 3
CH10	0-255	Color selection and speed (for 9CH and 10CH)