


Display Control Instruction

Welcome to use our Mini Led Beam 10W. The light uses energy-saving LED, long Product life, shockproof, dust-proof, DMX receiver and self-running feature, which can produce a variety of vivid lighting effects, easy to operate, suitable for all types of entertainment decoration, architectural lighting industry.

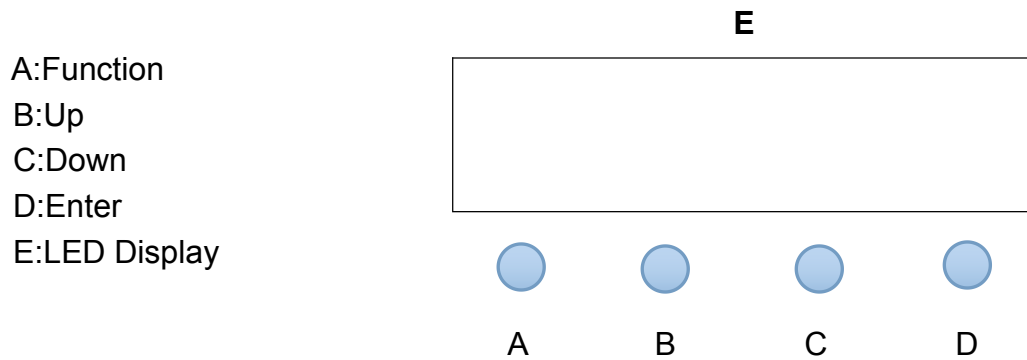

Instructions: Press the function key A cycled out the 11/13 different function effects, digital tube first two digits on behalf of which the current function (see menu). The last two digits represent the functions in which the address code or speed parameters. Press the B or C key to modify the parameter values. Press the D key to confirm.

Product Introduction

- * Input voltage: AC90--240V, 50--60HZ
- * Power consumption: 60W
- * LED Source : 10W RGBW
- * DMX Control-Channels: 11/13 Channels , DMX512 3-Pin
- * Dimmer: 0-100% mechanic dimmer
- * Operational modes: DMX512, Auto Run, Sound action, Strobe, Stand Alone and Master/Slave, With Rich Advanced Built-in Programs.
- * Display: LED display
- * Material structure: high temperature resistant plastic
- * Long Lifespan LEDs (more than 60,000 hours)
- * Product dimension: 160x100x270mm
- * Product Weight: 3KG
- *

Mini Led Beam 10W User's Manual



Please carefully read the product description before use

Maintenance

1. Please keep the light in dryness and avoiding use in wet place.
2. Using Intermittent can be extended the life.
3. Attention to clean the fan and lens usually in order to get the ventilating effects and lighting effects better.
4. Please do not wipe the crust using organic solvent for avoid to damaged the product.

Statement

The product has well capability and intact packing when leave factory, All of the user should comply with above warning item and manual, any misuse cause of the damages are not included in our guarantee, and also can't be responsible for any malfunction & problem owing to ignore the manual.

Please forgive that we will not be notice for technical change

Attention Item

- 1.For guarantee the life of product,please don't put it on the wet place and not use it the place over 40 degree.
- 2.Please don't lay the product on the un-fixable or shakable place.
- 3.Ask for the professional to maintain the product in order to avoid the danger of get an electric shock.
- 4.Power supply should not be changed over +&-10% while the light is using,it will be decreased the life of lamp if the power is too high,but it will be influenced the luminosity if the power is too low.
- 5.After power off,if it is need used again,please cool down over 20 minuter.
- 6.Please look round the manual for ensure the product can be used normally.

DMX Channel Summary-11 Channels Mode(when the DMX signal is received, the last decimal point of the digital tube will blink, otherwise it will not be received.)

Channel	Value	Function
CH1	0-255	X-axis, move,slow to fast
CH2	0-255	X-axis, pan fine
CH3	0-255	Y-axis, move,slow to fast
CH4	0-255	Y-axis, tilt fine
CH5	0-255	X,Y, Control Speed
CH6	0-255	Total Dimmer
CH7	0-255	Strobe,Slow to Fast
CH8	0-255	Red Dimmer,fade in
CH9	0-255	Green Dimmer,fade in
CH10	0-255	Blue Dimmer,fade in
CH11	0-255	White Dimmer,fade in

DMX Channel Summary-13 Channels Mode(when the DMX signal is received, the last decimal point of the digital tube will blink, otherwise it will not be received.)

Channel	Value	Function
CH1	0-255	X-axis, move,slow to fast
CH2	0-255	X-axis, pan fine
CH3	0-255	Y-axis, move,slow to fast
CH4	0-255	Y-axis, tilt fine

CH5	0-255	X,Y, Control Speed
CH6	0-255	Total Dimmer
CH7	0-255	Strobe,Slow to Fast
CH8	0-255	Red Dimmer,fade in
CH9	0-255	Green Dimmer,fade in
CH10	0-255	Blue Dimmer,fade in
CH11	0-255	White Dimmer,fade in
CH12	0-255	NO Effect(0-30);Auto Mode(30-100);Slow Auto Mode(100-250);Sound Mode(250-255)
CH13	0-255	Reset

Display Control Instruction

NO.	Display	Function
A001	001-512	DMX Channel Address Setting
CH13	/	DMX Channel:11/13CHs
RU01	RU01 RU02	Auto → Self-propelled mode Slow Auto Mode
SnoF	S non S no F	Sound Mode OFF Sound Mode
rPoF	rPoF rPon	X-axis rotates left X-axis rotates right
rton	rtof	Y-axis rotates backward Y-axis rotates onward
rdoF	oF o N	Reverse Display
rFon	rFon r F o F	NO Effect NO Effect
9	/	Reset